

## Dimensions:

Part No.	Description	L (mm)	W (mm)	H (mm)	Weight
431264	Harlock Court Floodlight 200W/300W/400W 3000K/4000K/5000K Grey symmetric Optic 90°	580	400	80	7.5Kg
431265	Harlock Court Floodlight 400W/500W/600W 3000K/4000K/5000K Grey symmetric Optic 90°	780	500	80	13Kg
431266	Harlock Court Floodlight 600W/700W/800W 3000K/4000K/5000K Grey symmetric Optic 90°	812	635	85	20Kg

## Installation Instructions

 
# Harlock Court Floodlight

<b>Input</b>	220 ~ 240V AC 50/60Hz
<b>Power</b>	200/300/400W, 400/500/600W, 600/700/800W
<b>Operating Temp</b>	-30 ~ +50°C
<b>Connection Type</b>	1M Flying Lead
<b>Light Source Energy Rating</b>	F



### Box Contents:

- Harlock Light Fitting

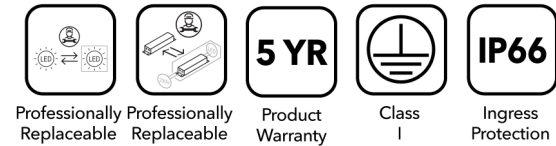

Professionally Replaceable

Professionally Replaceable


Product Warranty

Class I

Ingress Protection

### Tools Required For Installation:

 - 10mm Hex Key
- Philips Screwdriver
- Drill
- Slotted Screwdriver

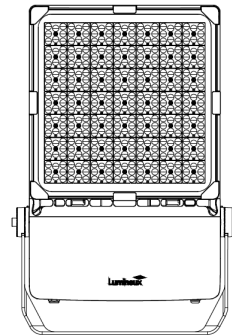

### End Of Life Disposal:

Disassembly instructions for end of life disposal available on website.  
Disposal of Electronic Equipment WEEE Directive 2002/96/EC This product falls within the scope of the Waste Electrical & Electronic Equipment Directive (WEEE), which means the product should not be disposed of as normal household waste. Please recycle where facilities exist or check with your Local Authority. RoHS - All components and materials used in this product are RoHS 2002/95/EC compliant. Specifications may change from time to time. The information contained in this leaflet is for guidance only and should not be considered as always accurate and should be treated as not representative.



**READ THESE INSTRUCTIONS THOROUGHLY BEFORE INSTALLATION  
KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.  
IMPORTANT:**

This product must be installed by a qualified electrician or competent person, and in accordance with current building and IET wiring regulations.

### Warranty:

This luminaire is warranted for a period of 5Years from the date of purchase\*\*. The backup battery pack in the emergency version is warranted for a period of 5Years. The warranty could be invalidated should the light fitting not be installed according to these instructions, outside the scope of the specification or the product has been altered or tampered with in any way. Please see website for terms and conditions.



**WARNING: Risk of electric shock!**  
**Isolate the mains power before proceeding.**

- Turn off the mains power before performing inspections, installation, or removal
- Verify that the supply voltage is correct by comparing it with the luminaire label information
- It is the installers responsibility to ensure installation is suitable for the total load of the luminaire(s). The supply cable, fuses/circuit breakers must be correctly rated for the electrical load and considering for any transient inrush currents that may occur.
- Do not perform insulation strength or resistance tests on installed luminaire(s) connected

**Wiring instructions for units equipped with EMERGENCY function:**

 
Emergency lighting luminaires must be installed and maintained in accordance with the emergency lighting standard BS 5266-1

- For the emergency unit to work correctly, please ensure that an uninterrupted permanent live feed is present and is connected directly to the 'Permanent Live' terminal of the mains terminal block. Please ensure there are no switches, PIRs etc within the permanent live feed, constant switching of the emergency pack could result in premature battery failure.
- Following power up the green LED indicator should illuminate to indicate charging. If power to the unit is disrupted or isolated, the unit indicating green LED will switch off, triggering the emergency LEDs to illuminate.
- When self-test mode is selected, 24hrs from connection to mains power, a 3hrs duration test will be performed automatically.


**Installation Procedure:**

1. Disconnect mains supply.
2. Drill holes for required fitting and fix bracket.
3. Secure using suitable fixing method.
4. Loosen M12 hexagon head screw
5. Tilt fitting to correct angle, tighten screws (Torque value 94Nm).
6. Choose required wattage & colour temperature.
7. Connect the incoming supply using a suitable terminal and junction box as required (Recommended WAGO 222).
8. Reconnect mains supply.


1.

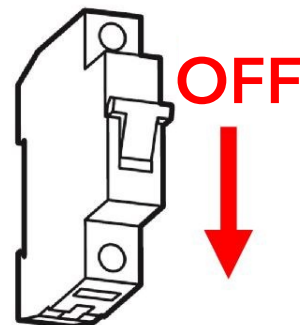

 
2.

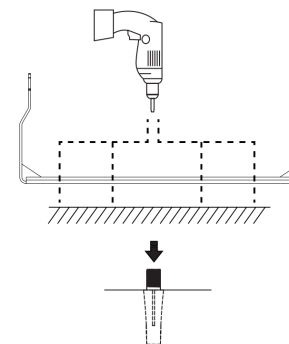

 
3.

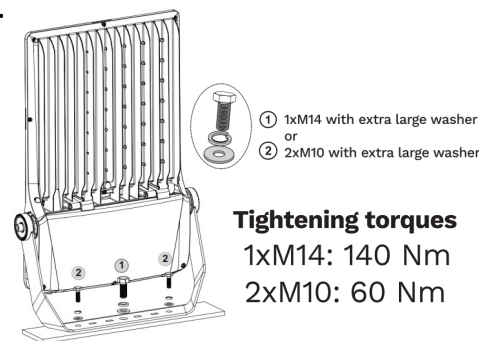

 
4.

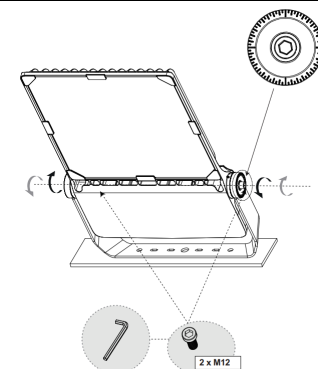

  5.

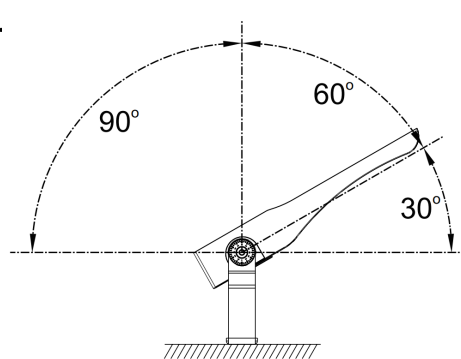

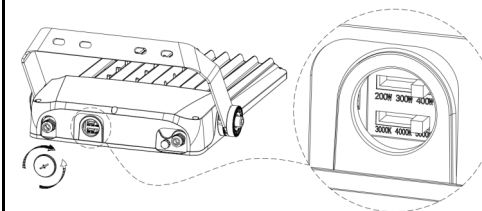


6.



7.

**Electrical connection wiring**

-  LIVE (L) = Brown
-  Earth (⊕) = Yellow/Green
-  NEUTRAL (N) = Blue

8.

