

Installation Instructions

Avon Pro Dual Wattage 4CCT Downlight

Input	220-240V AC
Power	4W/6W
Operating Temp	-10°C-+45°C
Connection Type	Lever Terminal
Emergency Option	430967 (Sold separately)
Control Connection	N/A
Light Source Energy Rating	D



Box Contents:

- Avon Pro Downlight
- Quick Connector



Beam
Angle



Non
Replaceable



Non
Replaceable



Fire Rated
30, 60, 90 mins




Class
II



Ingress *
Protection

Dimensions:

Part No.	Description	L (mm)	W (mm)	H (mm)	Weight
430850	Avon 4CCT 4W/6W Downlight	85	66	48	0.26Kg

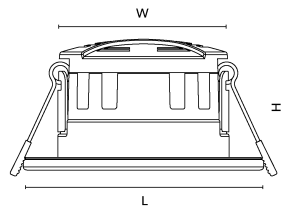

Tools Required For Installation:

- Hole Saw drill 68-75mm
- Wire Strippers / Cutters



Scan for more
Information.

* Below Ceiling Surface



READ THESE INSTRUCTIONS THOROUGHLY BEFORE INSTALLATION
KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

IMPORTANT:

This product must be installed by a qualified electrician or competent person,
and in accordance with current building and IET wiring regulations.

Warranty:

This luminaire is warranted for a period of 5 Years from the date of purchase**. The warranty could be invalidated should the light fitting not be installed according to these instructions, outside the scope of the specification or the product has been altered or tampered with in any way. Please see website for terms and conditions.



WARNING: Risk of electric shock!

Isolate the mains power before proceeding.

- Turn off the mains power before performing inspections, installation, or removal
- Verify that the supply voltage is correct by comparing it with the luminaire label information
- It is the installers responsibility to ensure installation is suitable for the total load of the luminaire(s). The supply cable, fuses/circuit breakers must be correctly rated for the electrical load and considering for any transient inrush currents that may occur.
- Do not perform insulation strength or resistance tests on installed luminaire(s) connected

Wiring instructions for units equipped with EMERGENCY function:


Emergency lighting luminaire must be installed and maintained in accordance with the emergency lighting standard BS 5266-1

- For the emergency unit to work correctly, please ensure that an uninterrupted permanent live feed is present and is connected directly to the 'Permanent Live' terminal of the mains terminal block. Please ensure there are no switches, PIRs etc within the permanent live feed, constant switching of the emergency pack could result in premature battery failure.
- Following power up the green LED indicator should illuminate to indicate charging. If power to the unit is disrupted or isolated, the unit indicating green LED will switch off, triggering the emergency LEDs to illuminate.
- When self-test mode is selected, 24hrs from connection to mains power, a 3hrs duration test will be performed automatically.


Installation Procedure:

1. Drill 68-75mm hole cut out.
2. Strip cable reveal 10mm of conductor. Lift levers on terminal and push wires into connector, then push levers downwards to secure the wires.
3. Attach connector to other half of the light fitting.
4. Select CCT option and wattage option by moving switch across to desired setting.
5. Grip spring clamps and move vertically. Insert downlight into pre-drilled hole.
6. Reconnect mains supply.


1.

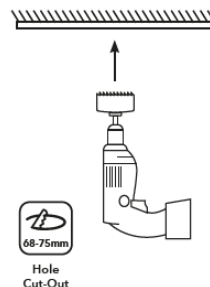


2.

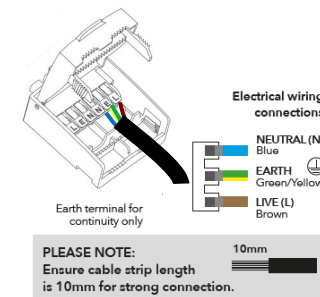


3.

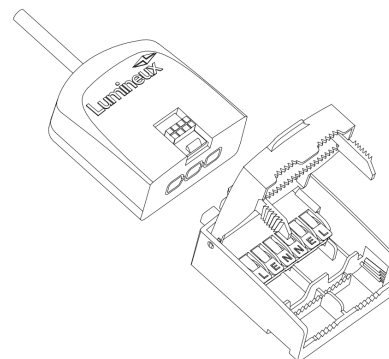


4.

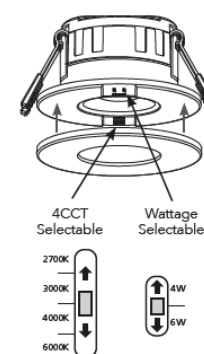

5.

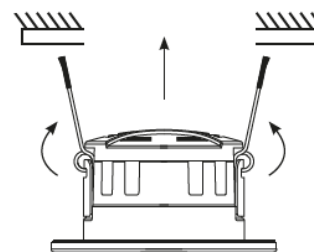

6.

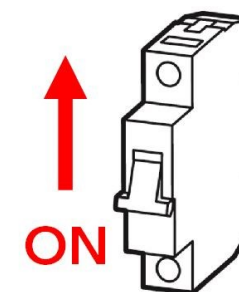

7.

8.