






Melbury Plus PIR Plug & Play PIR Sensor Part number 431383 (Sold Separately)

Melbury Plus DD Plug & Play DD Sensor Part number 431382 (Sold Separately)

Dimensions:

Part No.	Description	L (mm)	W (mm)	H (mm)	Weight
431376	Melbury Plus Floodlight 10W 4000K	112	54	154	0.29Kg
431377	Melbury Plus Floodlight 20W 4000K	130	56	167	0.35Kg
431378	Melbury Plus Floodlight 30W 4000K	150	57	182	0.46Kg
431379	Melbury Plus Floodlight 50W 4000K	180	57	202	0.68Kg
431380	Melbury Plus Floodlight 70W 4000K	210	57	216	0.89Kg
431381	Melbury Plus Floodlight 100W 4000k	245	59	242	1.23Kg

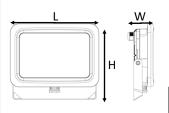

End Of Life Disposal:

Disassembly instructions for end of life disposal available on website.

Disposal of Electronic Equipment WEEE Directive 2002/96/EC This product falls within the scope of the Waste Electrical & Electronic Equipment Directive (WEEE), which means the product should not be disposed of as normal household waste. Please recycle where facilities exist or check with your Local Authority. RoHS - All components and materials used in this product are RoHS 2002/95/EC compliant. Specifications may change from time to time. The information contained in this leaflet is for guidance only and should not be considered as always accurate and should be treated as not representative.

Installation Instructions



Melbury Plus Floodlight

Input	220-240V ASC 50/60Hz		
Power	10W/20W/30W/50W		
Operating Temp	-20°C ~ +30°C		
Connection Type	Flying Lead		
Emergency Option	N/A		

Light Source Energy Rating C

100

Angle



Replaceable

431383, 431382 (Sold Separately)



Replaceable







Product

Protection

Tools Required For Installation:

Melbury Floodlight

Phillips Screwdriver

Control Connection

Box Contents:

Drill





READ THESE INSTRUCTIONS THOROUGHLY BEFORE INSTALLATION KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE. IMPORTANT:

This product must be installed by a qualified electrician or competent person, and in accordance with current building and IET wiring regulations.

Warranty:

This luminaire is warranted for a period of 3 Years from the date of purchase**. The warranty could be invalidated should the light fitting not be installed according to these instructions, outside the scope of the specification or the product has been altered or tampered with in any way. Please see website for terms and conditions.







WARNING: Risk of electric shock! Isolate the mains power before proceeding.

- Turn off the mains power before performing inspections, installation, or removal
- Verify that the supply voltage is correct by comparing it with the luminaire label information
 - It is the installers responsibility to ensure installation is suitable for the total load of the luminaire(s). The supply cable, fuses/circuit brakers must be correctly rated for the electrical load and considering for any transient inrush currents that may occur.
 - Do not perform insulation strength or resistance tests on installed luminaire(s) connected

Installation Procedure:

- 1. Disconnect mains supply.
- 2. Mark the holes as required and drill using appropriate size drill bit. Using suitable fixings (not provided) secure the unit to the required location.
- 3. Adjust angle to suit and tighten bracket screws (allowed operating positions shown)
- 4. Connect the incoming supply using a suitable terminal and junction box as required (Recommended WAGO 222)
- 5. Reconnect mains supply.

Mounting Height, Detection Area & Detection Radius for PIR Sensor:

Maximum Mounting Height: 3M Maximum Detection Area: 8 metres

Detection Radius: 180°

*Fixture to be mounted no less than 1 metre away from any light source.

