


* Dimming

To achieve good dimming results, use dimmers that have been approved for electronic LED drivers.

Please see our website for a list of compatible dimmers.

Dimensions:

Part No.	Description	L (mm)	W (mm)	H (mm)	Weight
430865	Avon 4CCT Anti-Glare Downlight White Bezel - Black Insert	85	66	68	0.29Kg
430864	Avon 4CCT Anti-Glare Downlight White Bezel - White Insert	85	66	68	0.29Kg

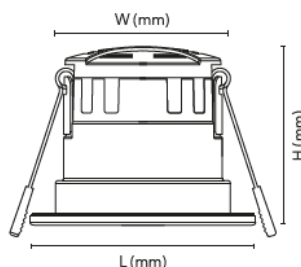

End Of Life Disposal:

Disassembly instructions for end of life disposal available on website.
Disposal of Electronic Equipment WEEE Directive 2002/96/EC This product falls within the scope of the Waste Electrical & Electronic Equipment Directive (WEEE), which means the product should not be disposed of as normal household waste. Please recycle where facilities exist or check with your Local Authority. RoHS - All components and materials used in this product are RoHS 2002/95/EC compliant. Specifications may change from time to time. The information contained in this leaflet is for guidance only and should not be considered as always accurate and should be treated as not representative.

Installation Instructions



Avon Pro Dual Wattage Anti-Glare Fire Rated Downlight

Input	220-240V AC
Power	6W/8W
Operating Temp	-10° - +45°C
Connection Type	Lever Terminal
Emergency Option	430967 (Sold separately)
Control Connection	N/A
Light Source Energy Rating	D



Box Contents:

- Avon pro Anti-Glare Downlight
- Quick Connector



Beam Angle



Non Replaceable



Non replaceable



Fire Rated
0, 60, 90 mins



Class II



Product Warranty

Tools Required For Installation:

- Hole Saw drill 68-75mm
- Wire Strippers/ Cutters



Scan for more Information.



**READ THESE INSTRUCTIONS THOROUGHLY BEFORE INSTALLATION
KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

IMPORTANT:

This product must be installed by a qualified electrician or competent person, and in accordance with current building and IET wiring regulations.

Warranty:

This luminaire is warranted for a period of 5 Years from the date of purchase**. The warranty could be invalidated should the light fitting not be installed according to these instructions, outside the scope of the specification or the product has been altered or tampered with in any way. Please see website for terms and conditions.



WARNING: Risk of electric shock!
Isolate the mains power before proceeding.

- Turn off the mains power before performing inspections, installation, or removal
- Verify that the supply voltage is correct by comparing it with the luminaire label information
- It is the installers responsibility to ensure installation is suitable for the total load of the luminaire(s). The supply cable, fuses/circuit breakers must be correctly rated for the electrical load and considering for any transient inrush currents that may occur.
- Do not perform insulation strength or resistance tests on installed luminaire(s) connected

Wiring instructions for units equipped an with EMERGENCY function:


Emergency lighting luminaries must be installed and maintained in accordance with the emergency lighting standard BS 5266-1

- For the emergency unit to work correctly, please ensure that an uninterrupted permanent live feed is present and is connected directly to the 'Permanent Live' terminal of the mains terminal block. Please ensure there are no switches, PIRs etc within the permanent live feed, constant switching of the emergency pack could result in premature battery failure.
- Following power up the green LED indicator should illuminate to indicate charging. If power to the unit is disrupted or isolated, the unit indicating green LED will switch off, triggering the emergency LEDs to illuminate.
- When self-test mode is selected, 24hrs from connection to mains power, a 3hrs duration test will be performed automatically.


Installation Procedure:

1. Drill 68-75mm hole cut out.
2. Strip cable sleeves to reveal 10mm wire. Push wires into connector and push clamps downwards to secure the wires.
3. Attach connector to other half on light fitting.
4. Select CCT option and Wattage option by moving switch across to desired setting.
5. Grip spring clamps and move vertically.
6. Insert downlight into pre-drilled hole and clamps will spring back and secure light fitting. Repeat for any other downlights, then connect power on.


1.

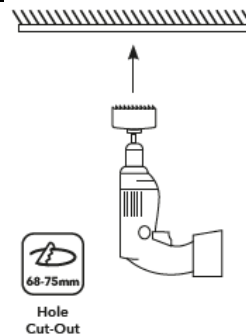


2.

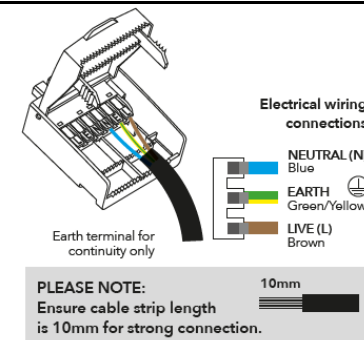


3.

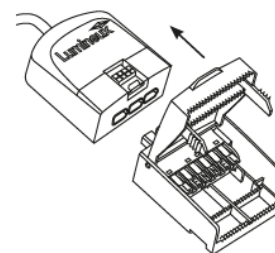

4.

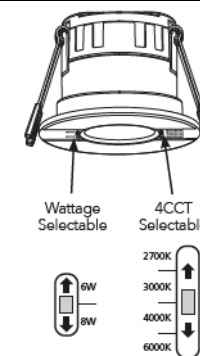

5.

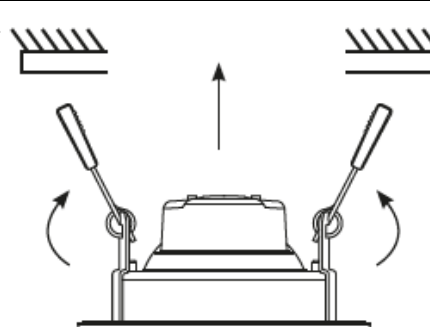

6.

