Installation Instructions



Wilton Floodlight

Input	100-277V AC 50/60Hz	
Power	100W/150W/200W/240W/280W	
Operating Temp	-30°C-+50°C	
Connection Type	Flying Lead	
Emergency Option	N/A	
Control Connection	N/A	
Light Source Energy Rating	В	









Protection

Box Contents:

Light Fitting

Professionally Replaceable Replaceable

Tools Required For Installation:

- 6mm Hex Key
- Wire Strippers/Cutters





READ THESE INSTRUCTIONS THOROUGHLY BEFORE INSTALLATION KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE. **IMPORTANT:**


This product must be installed by a qualified electrician or competent person, and in accordance with current building and IET wiring regulations.

Warranty:

This luminaire is warranted for a period of 5 Years from the date of purchase**. The warranty could be invalidated should the light fitting not be installed according to these instructions, outside the scope of the specification or the product has been altered or tampered with in any way. Please see website for terms and conditions.

Dimensions:

Part No.	Description	L (mm)	W (mm)	H (mm)	Weight	
430711	Wilton 100W Floodlight	325	264	55	2.2Kg	
430712	Wilton 150W Floodlight	442	324	85	4.7Kg	L
430714	Wilton 200W Floodlight	467	385	94	6.3Kg	
430715	Wilton 240W Floodlight	467	385	94	6.3Kg	
430716	Wilton 280W Floodlight	467	385	94	7.5Kg	

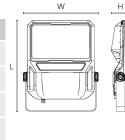

End Of Life Disposal:

Disassembly instructions for end of life disposal available on website.

Disposal of Electronic Equipment WEEE Directive 2002/96/EC This product falls within the scope of the Waste Electrical & Electronic Equipment Directive (WEEE), which means the product should not be disposed of as normal household waste. Please recycle where facilities exist or check with your Local Authority. RoHS - All components and materials used in this product are RoHS 2002/95/EC compliant. Specifications may change from time to time. The information contained in this leaflet is for guidance only and should not be considered as always accurate and should be treated as not representative.





4

WARNING: Risk of electric shock! Isolate the mains power before proceeding.

- Turn off the mains power before performing inspections, installation, or removal
- Verify that the supply voltage is correct by comparing it with the luminaire label information
- It is the installers responsibility to ensure installation is suitable for the total load of the luminaire(s). The supply cable, fuses/circuit brakers must be correctly rated for the electrical load and considering for any transient inrush currents that may occur.
- Do not perform insulation strength or resistance tests on installed luminaire(s) connected

Installation Procedure:

- 1. Drill appropriate sized holes into your wall or ceiling and insert appropriate bolts.
- 2. Use correct fixings for fixing the light to desired surface. If installing in a harsh environment, please use adequate corrosion resistant fixings
- 3. Adjust light fitting to correct angle. DO NOT INSTALL UPSIDE DOWN.
- 4. Connect the incoming supply using a suitable terminal and junction box as required (Recommended WAGO 222)
- 5. Reconnect mains supply

